

# KL CHEROKEE POD LIGHT MOUNTS

## TOOLS REQUIRED

- 10mm Socket
- 17mm Wrench
- 3/4" Hole Saw
- 4mm Allen Key


1. Start by removing the rubber cover, disengaging 3 clips. The top two clips pull towards center of the vehicle. The bottom clip pulls towards the rear.



2. Using 10mm socket, remove the 6mm bolt from the fender mount

3. Cut out guide template and use to mark area to be removed.

4. Using 3/4" hole saw, cut out a hole centered on the mark made in previous step.

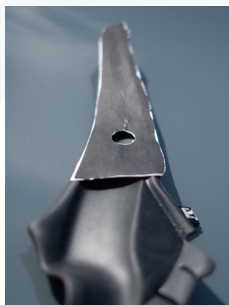

5. Reinstall rubber cover.

## KL CHEROKEE POD LIGHT MOUNTS



6. Insert a post through the hole with the threaded screw facing down, and attach via the threaded fender mount from step 2. Hand tighten with a 17mm wrench.

\* In some cases due to manufacturing tolerances from Jeep, the hole in the rubber grommet may need to be adjusted. A rotary tool with sanding attachment, or sharp cutting tool, can be used to carefully widen the hole as necessary.

7. Insert the included socket screw through the smaller hold in the mounting plate, and attach loosely via the threaded hole. Rotate the mount to the desired position, allowing room for the pod light hardware to be secured on the bottom side.

8. Repeat for other side of vehicle

9. Attach pod lights (not included) via the remaining hole. Mounts are designed for 5/16 hardware

